How to Set-up the Roku:



- Plug the smaller connector of the cable into the end of the Roku stick.
- Hibril IN 2 Digital Application of the control of t
- Plug the Roku stick into the HDMI port of your TV.
- If you have a USB port on your TV, plug the other end of the cable into it. If you don't, plug that end of the cable into the AC adapter, and plug that into a wall outlet

or surge protector.

- Turn on your TV and set the "source" or "input" to HDMI.
- The *Roku* will turn on automatically. Once started it should ask you to choose a wi-fi network. Select your network and enter your password if you have one. If your choice of networks does not appear automatically, select "Settings" on the *Roku* Homepage, then "Network," and choose yours. If the *Roku* does not see your network, this is most likely an issue with your wi-fi signal. The Library is unable to assist with wi-fi troubleshooting.
- Once connected, you will see the *Roku* home screen, which displays available channels. The only available channel is **VUDU**. Select it and you will be taken to the Library's **VUDU** account.
- Once you are in **VUDU**, scroll to "My VUDU" on the menu bar at the top of the screen. Then select "Movies" or "TV."
- All available titles will appear on the screen. Make your selection and enjoy! You may watch as many titles as you like during your loan period.
- Please be sure to return all pieces- stick, remote, cable and AC adapter- to the Circulation Desk. Set must be complete to be checked in and removed from your account. A replacement fee will be charged for any missing or damaged items.

Each Roku Box Contains:

Roku streaming stick
Remote control
Cable
AC Adapter
Instruction card

All items will be verified before check out and upon return.

Roku streaming sticks are available to Manhasset Library cardholders only.

The loan period is 7 days.

The Roku may not be reserved or renewed.

There is a \$2 per day late fee.

Replacement fees if items are missing or damaged are as follows:

Roku stick: \$50; remote control: \$20; cable and/or AC adapter: \$10.

Roku box must be returned to the Circulation Desk. DO NOT LEAVE IN THE OUTSIDE DROPBOX!